

# IB909F

Intel® Broadwell-ULT  
3.5" Disk Size SBC

## USER'S MANUAL

Version 1.0

---

## Acknowledgments

AMI is a registered trademark of American Megatrends Inc.

PS/2 is a trademark of International Business Machines Corporation.

Intel and Intel® 5<sup>th</sup> Generation Mobile Core™ i MCP Processor are registered trademarks of Intel Corporation.

Microsoft Windows is a registered trademark of Microsoft Corporation.

NUVOTON is a registered trademark of NUVOTON Technology Corporation.

All other product names or trademarks are properties of their respective owners.

---

# Table of Contents

<b>Introduction .....</b>	<b>1</b>
Product Description.....	1
Checklist.....	2
IB909F Specifications.....	2
Board Dimensions .....	4
<b>Installations .....</b>	<b>5</b>
Installing the Memory .....	6
Setting the Jumpers .....	7
Connectors on IB909F .....	11
<b>BIOS Setup.....</b>	<b>23</b>
BIOS Introduction .....	24
BIOS Setup.....	24
Advanced Settings.....	26
Chipset Settings.....	37
Security Settings.....	40
Boot Settings .....	41
Save & Exit Settings .....	42
<b>Drivers Installation .....</b>	<b>43</b>
Intel Chipset Software Installation Utility.....	44
VGA Drivers Installation .....	47
Realtek HD Audio Driver Installation.....	49
LAN Drivers Installation.....	51
Intel® Management Engine Interface .....	55
<b>Appendix .....</b>	<b>57</b>
A. I/O Port Address Map.....	57
B. Interrupt Request Lines (IRQ) .....	58
C. Watchdog Timer Configuration.....	59

---

*This page is intentionally left blank.*

# Introduction

## Product Description

---

The IB909F is a 3.5-inch single board computer based on the Intel® Broadwell-ULT MCP processors.

The IB909F platform is well suited for low-power and high-performance designs in a broad range of markets including Industrial Control & Automation, Digital Signage, Thin Client, Electronic Gaming Machines, and SMB storage appliances.

### IB909F Features:

- Supports Intel® 5<sup>th</sup> generation mobile Core™ i MCP processors
- Two DDR3L SO-DIMM, 1333/1600 MHz, Max. 16GB memory
- Integrated graphics for DVI-I, LVDS displays
- 2 x SATA III connector
- 2x COM port connector
- 2 x Mini-PCIe(x1) slot (*w/ USB/MSATA support*)
- 2x GbE (RJ-45) connector
- 1x 9V to 24V DC-IN power connector

## Checklist

Your IB909F package should include the items listed below.


- The IB909F SBC
- This User's Manual
- 1 CD containing chipset drivers and flash memory utility
- Optional cable kit (containing DC in power cable/PW87, COM port cable / PK1H, SATA & HDD power cable/SATA-26 and USB 2.0 cable/USB-29)
- Other options: Audio-18 audio cable, HSIB908-BGA-1 heatsink

## IB909F Specifications

<b>Product Name</b>	<b>IB909F</b>
<b>Form Factor</b>	3.5" SBC
<b>CPU Type</b>	- Intel® 5 <sup>th</sup> generation mobile Core™ i MCP processors (22nm monolithic) - TDP = 15W (DC) , FCBGA1168 @ solder side
<b>CPU Speed</b>	Intel® Core™ i7-5650U processor (2.2GHz) <b>[IB909AF-5650]</b> Intel® Core™ i5-5350U processor (1.8GHz) <b>[IB909AF-5350]</b> Intel® Core™ i3-5010U processor (2.1GHz) <b>[IB909F-5010]</b>
<b>Cache</b>	Up to 4MB
<b>Chipset</b>	Integrated in Intel® 5 <sup>th</sup> Generation Core™ i U-series processor
<b>BIOS</b>	AMI BIOS
<b>Memory</b>	Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor integrated memory controller - DDR3L (1.35V) @1600 MHz, SO-DIMM [204-pin vertical] x 2 - Max. 16GB, Non-ECC
<b>Display</b>	Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor integrated Gfx, supports 3 independent displays, Direct X 11.1, OpenGL 4.2, Open CL 1.2 - DVI-I x 1 (Thru DDI#1 w/ Level shifter [ASM1442K] for DVI + DP to VGA [NXP PTN3392] )
<b>LVDS</b>	- LVDS(Thru eDP, via NXP PTN3460 bridge IC) 24-bit dual channels LVDS interface w/DF20 socket x2
<b>LAN</b>	Intel® I218LM GbE PHY (IB909AF-5650& IB909AF-5350) or I218V GbE PHY (IB909F-5010 & IB909F-3765) Intel® I211AT as 2 <sup>nd</sup> GbE
<b>USB</b>	- Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor integrated USB 2.0 host controller, supports 4 x USB 2.0: 2-ports onboard pin header + 2 port thru MiniPCle - Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor integrated USB 3.0 host controller, supports 2 x USB 3.0 in the rear panel

<b>Serial ATA Ports</b>	Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor built-in SATA controller 2 x SATA 3.0 (6Gbps) and 2 x mSATA via MiniPCle slots (w/NXP CBTL02043A switching IC)
<b>Audio</b>	Intel® 5 <sup>th</sup> Gen. Core™ i U-series processor built-in High Definition Audio controller + Realtek ALC269Q-VC2-GR Codec [6mm x 6mm @ MQFN48] w/ class-D speaker amplifier(2W per channel @ 5V power supply)
<b>LPC I/O</b>	Nuvoton NCT6102D [128-pin LQFP, 14 mm x 14mm x 1.4mm] COM1 (RS232/422/485) [EXAR SP339EER1 232/422/485 transceiver for jumper-less]; COM2 (RS232 only) [SIPEX SP3243EBER, QFN32] [Hardware Monitor] 2 x Thermal inputs 2 x Voltage monitoring 1 x CPU Fan (PWM Fan type, 4-pin connector)
<b>Digital IO</b>	4 in & 4 out
<b>iAMT(10.0)</b>	For IB909AF-5650 / IB909AF-5350
<b>Expansion Slots</b>	1x mSATA/mPCle(x1) w/ USB signal [Half-sized] 1x mSATA/mPCle(x1) w/ USB signal [Full-sized]
<b>Edge Connector</b>	DVI-I x 1 RJ45 x2 for LAN#1 & #2 USB 3.0 stack connector x 1 for USB1 / 2 [Blue color] DB9 x 1 for COM #1
<b>Onboard Header/Connector</b>	DF20-20 socket connector x 2 for 24-bit dual channel LVDS 2 ports x SATA III [Blue color] 2x4 pins header x 1 for 2 USB 2.0 ports [DF11] 2x6 pins box header x1 for Audio [DF11] 1x4 pins box header x1 for Speaker out 2x5 pins box header x1 for COM2 2x5 pins headers x 1 for LPC (Debug purposes only) 5 pins box header x1 for smart battery 4 pins box header x1 for backlight/brightness control 4 pins power connector x1 for SATA HDD 2 pins power connector x1 for DC-in [180 degree vertical type]
<b>Watchdog Timer</b>	Yes (256 segments, 0, 1, 2...255 sec/min)
<b>Power Input</b>	+9V ~ +24V DC-in
<b>RoHS</b>	Yes
<b>Board Size</b>	102mm x 147mm
<b>OS supported</b>	Windows 8 / Embedded; Windows 7 / Embedded Linux
<b>Others</b>	Heatsink i-SMART (Auto-scheduler & Power fail resume function) EEPROM 24C02(Reserved for designing, M-SO8 package)

# Board Dimensions

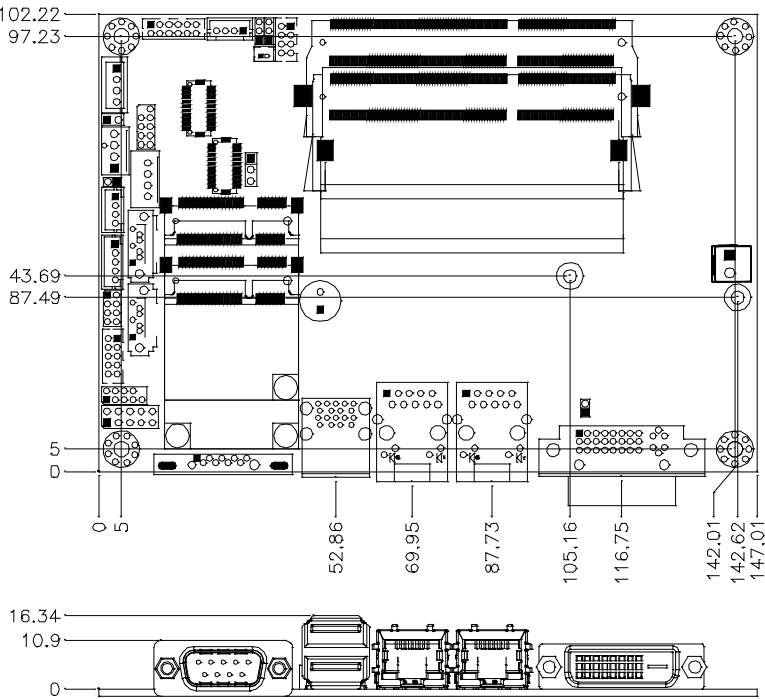



## **Installations**

This section provides information on how to use the jumpers and connectors on the IB909F in order to set up a workable system. The topics covered are:

Installing the Memory .....	6
Setting the Jumpers.....	7
Connectors on IB909F.....	11

## Installing the Memory


---

The IB909F board supports two DDR3L memory sockets for a maximum total memory of 16GB DDR3L memory type.

### Installing and Removing Memory Modules

To install the DDR3L modules, locate the memory slot on the board and perform the following steps:

1. Hold the DDR3L module so that the key of the DDR3L module aligned with that on the memory slot.
2. Gently push the DDR3L module in an upright position until the clips of the slot close to hold the DDR3L module in place when the DDR3L module touches the bottom of the slot.
3. To remove the DDR3L module, press the clips with both hands.

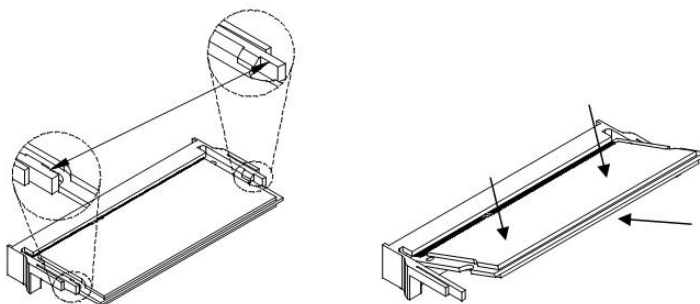


## Setting the Jumpers

---

Jumpers are used on IB909F to select various settings and features according to your needs and applications. Contact your supplier if you have doubts about the best configuration for your needs. The following lists the connectors on IB909F and their respective functions.


Jumper Locations on IB909F .....	8
J3: Clear CMOS Contents .....	9
J4: Clear ME Contents.....	9
J7: Flash Descriptor Security Override (Factory use only) .....	10
J9: LVDS Panel Power Selection .....	10

Jumper Locations on IB909F

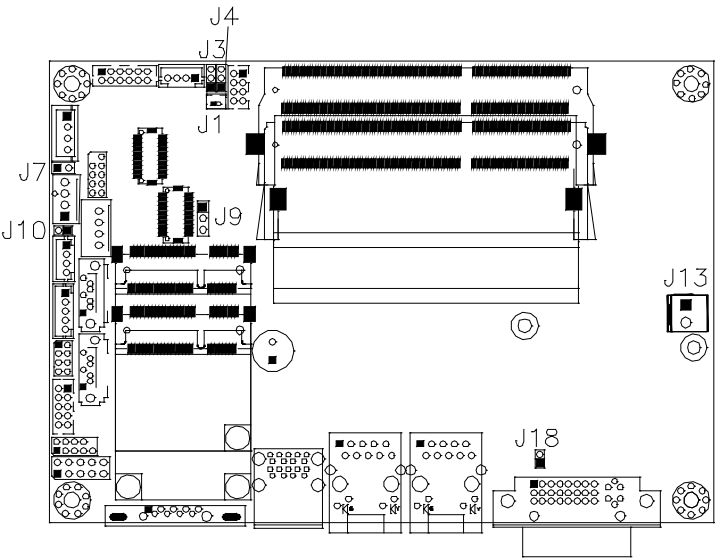


Jumpers on IB909F .....	Page
J3: Clear CMOS Contents.....	9
J4: Clear ME Contents .....	9
J9: LVDS Panel Power Selection .....	10

### J3: Clear CMOS Contents

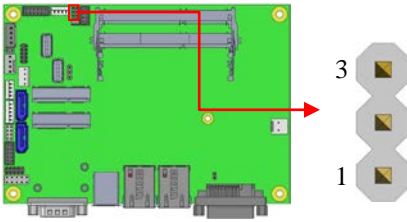

J3	Setting	Function
 1 2 3	Pin 1-2 Short/Closed	Normal
 1 2 3	Pin 2-3 Short/Closed	Clear CMOS

### J4: Clear ME Contents

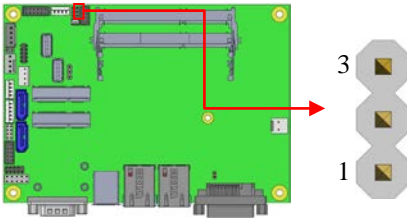




J4	Setting	Function
 1 2 3	Pin 1-2 Short/Closed	Normal
 1 2 3	Pin 2-3 Short/Closed	Clear ME RTC Register

J7: Flash Descriptor Security Override (Factory use only)

J7	Flash Descriptor Security Override
Open	Disabled (Default)
Close	Enabled

J9: LVDS Panel Power Selection

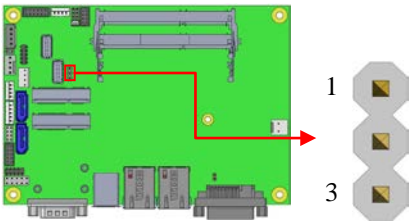


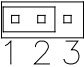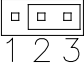J9	Setting	Panel Voltage
 1 2 3	Pin 1-2 Short/Closed	3.3V (default)
 1 2 3	Pin 2-3 Short/Closed	5V


## Connectors on IB909F

Connector Locations on IB909F .....	12
CN3, CN4: Gigabit LAN.....	13
CN3: Intel® Clarkville I218V/I218LM GbE PHY .....	13
CN4: Intel® Pearsonville I211AT as 2nd GbE .....	13
CN5: USB 1/2 Connector.....	13
CN6: VGA DVI-I Connector .....	13
CN7: DB9 Connector .....	13
CN1, CN2: SATA Connectors .....	14
JP1: LCD Backlight Connector .....	14
JP2: USB3/4 Connector.....	14
J2: Audio Connector (DF11 Connector) .....	15
JP3, JP5: LVDS Connectors (LVDS1,LVDS2) .....	15
JP4: SPI Flash Connector (factory use only).....	16
J5: Amplifier Connector .....	16
J7: Factory use only.....	16
JP6: SATA HDD Power Connectors.....	17
JP7: Debug 80 Port Connector (factory use only) .....	17
J12: Smart Battery .....	18
J13: Board Input Power Connector .....	18
J14: Front Panel Connector .....	19
J15: Mini PCIE Connector (Supports mSATA).....	20
J16: Mini PCIE Connector (Half Size/ Supports mSATA).....	20
J17: COM2/RS232 Serial Port .....	20
J19: Digital I/O Connector .....	21
CPU_FAN1: CPU Fan Power Connector.....	21

## Connector Locations on IB909F

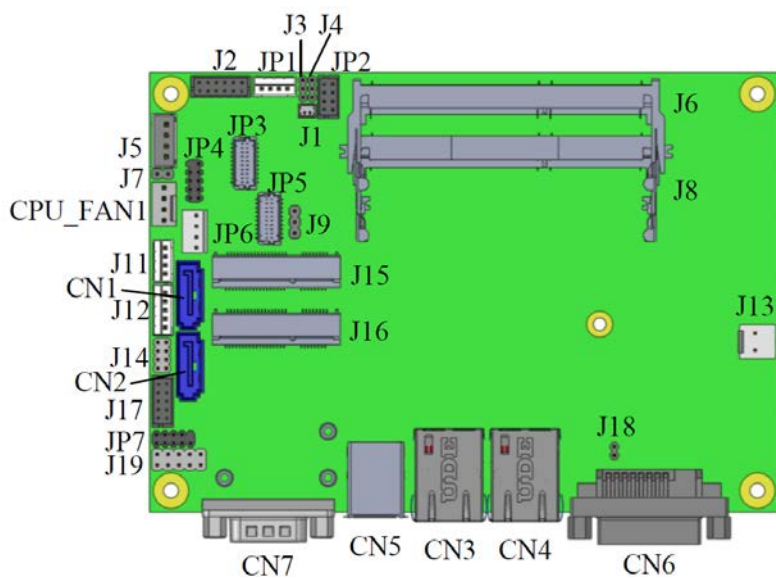



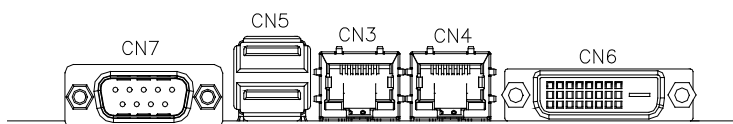

**CN3, CN4: Gigabit LAN**

**CN3:** Intel® Clarkville I218V/I218LM GbE PHY

**CN4:** Intel® Pearsonville I211AT as 2nd GbE

**CN5: USB 1/2 Connector**


**CN6: VGA DVI-I Connector**

**CN7: DB9 Connector**

(COM1) is a DB-9 connector.


Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	6	DSR, Data set ready
RXD, Receive data	2	7	RTS, Request to send
TXD, Transmit data	3	8	CTS, Clear to send
DTR, Data terminal ready	4	9	RI, Ring indicator
GND, ground	5	10	Not Used

**COM1 is jumper-less for RS-232, RS-422 and RS-485 and is to be configured with BIOS Selection.**




Pin #	Signal Name		
	RS-232	R2-422	RS-485
1	DCD	TX-	DATA-
2	RX	TX+	DATA+
3	TX	RX+	NC
4	DTR	RX-	NC
5	Ground	Ground	Ground
6	DSR	NC	NC
7	RTS	NC	NC
8	CTS	NC	NC
9	RI	NC	NC
10	NC	NC	NC

**CN1, CN2: SATA Connectors**

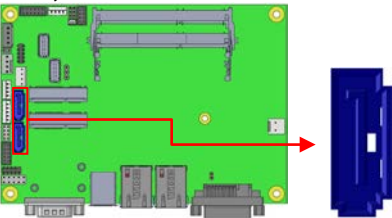


**JP1: LCD Backlight Connector**

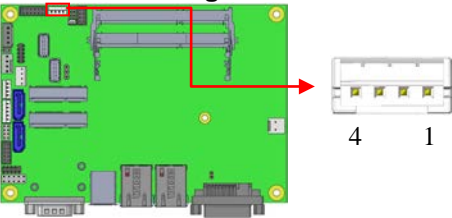


Pin #	Signal Name
1	+12V
2	Backlight Enable
3	Brightness Control
4	Ground

**JP2: USB3/4 Connector**

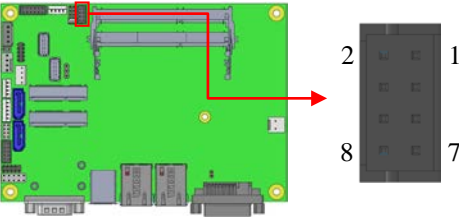

Signal Name	Pin #	Pin #	Signal Name
Vcc	1	2	Ground
D0-	3	4	D1+
D0+	5	6	D1-
Ground	7	8	Vcc


## J2: Audio Connector (DF11 Connector)

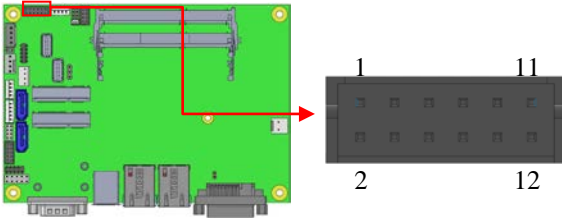

Signal Name	Pin #	Pin #	Signal Name
LINEOUT R	2	1	LINEOUT L
Ground	4	3	JD FRONT
LINEIN R	6	5	LINEIN L
Ground	8	7	JD LINEIN
MIC-R	10	9	MIC L
Ground	12	11	JD MIC1


## JP3, JP5: LVDS Connectors (LVDS1, LVDS2)

The LVDS connectors (Hirose DF20G-20DP-1V) on board consist of the first channel (LVDS1) and second channel (LVDS2).

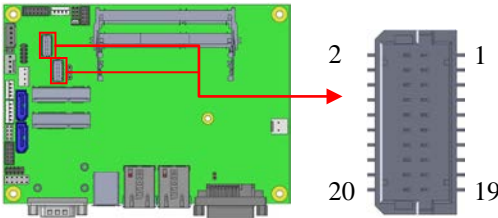


Signal Name	Pin #	Pin #	Signal Name
TX0N	2	1	TX0P
Ground	4	3	Ground
TX1N	6	5	TX1P
Ground	8	7	Ground
TX2N	10	9	TX2P
Ground	12	11	Ground
CLKN	14	13	CLKP
Ground	16	15	Ground
TX3N	18	17	TX3P
Power	20	19	Power

**JP4: SPI Flash Connector (factory use only)**

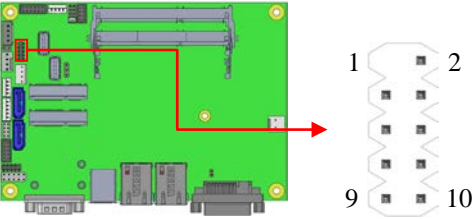


**J5: Amplifier Connector**

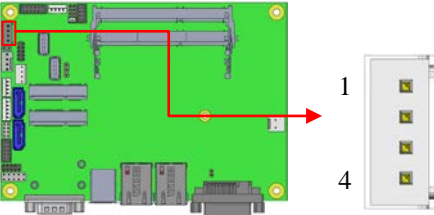


Pin #	Signal Name
1	OUTL+
2	OUTL-
3	OUTR-
4	OUTR+


**J6, J8: DDR3L SO-DIMM Sockets**

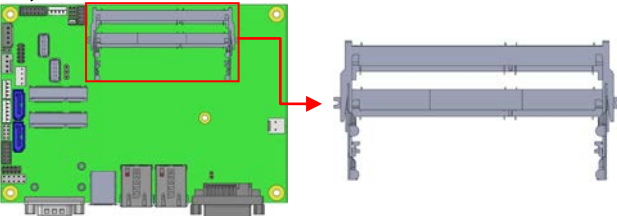

**J7: Factory use only**

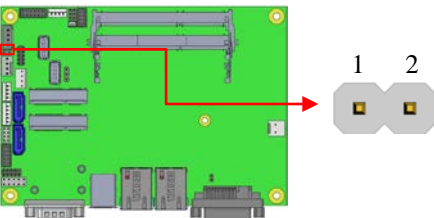


### JP6: SATA HDD Power Connectors

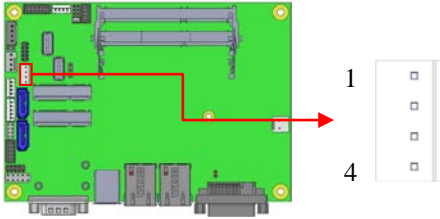


Pin #	Signal Name
1	+5V
2	Ground
3	Ground
4	+12V


### JP7: Debug 80 Port Connector (factory use only)

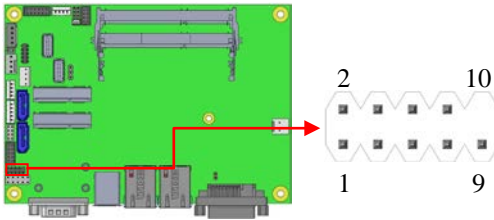

### J11: MCU Flash Connector (factory use only)

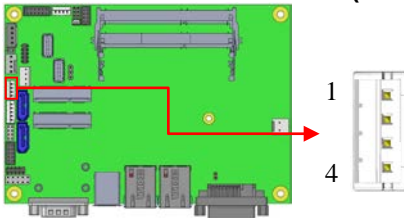


J12: Smart Battery

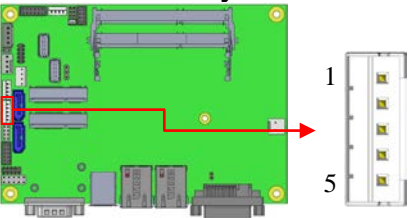

Pin #	Signal Name
1	RST#
2	ICHSWI#
3	Ground
4	SMB_DATA
5	SMB_CLK


J13: Board Input Power Connector

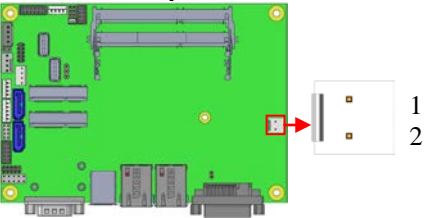

Pin #	Signal Name
1	+9V to +24V
2	Ground

## J14: Front Panel Connector

The following table shows the pin outs of the 2x4 pin header

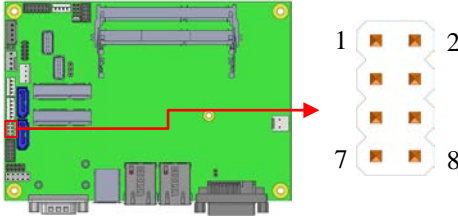

Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	PWR_SW
PWR_LED+	3	4	PWR_LED-
HDD_LED+	5	6	HDD_LED-
Ground	7	8	Reset

J14 provides connectors for system indicators that provide light indication of the computer activities and switches to change the computer status.

J14 is an 8-pin header that provides interfaces for the following functions.

### ATX Power ON Switch: Pins 1 and 2

This 2-pin connector is an “ATX Power Supply On/Off Switch” on the system that connects to the power switch on the case. When pressed, the power switch will force the system to power on. When pressed again, it will force the system to power off.

### Power LED: Pins 3 and 4

Pin #	Signal Name
3	LED(+)
4	LED(-)

### Hard Disk Drive LED Connector: Pins 5 and 6


This connector connects to the hard drive activity LED on control panel. This LED will flash when the HDD is being accessed.

Pin #	Signal Name
5	LED(+)
6	LED(-)


**Reset Switch: Pins 7 and 8**

The reset switch allows the user to reset the system without turning the main power switch off and then on again. Orientation is not required when making a connection to this header.

**J15: Mini PCIE Connector (Supports mSATA)**

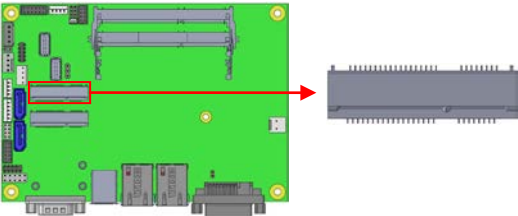


**J16: Mini PCIE Connector (Half Size/ Supports mSATA)**

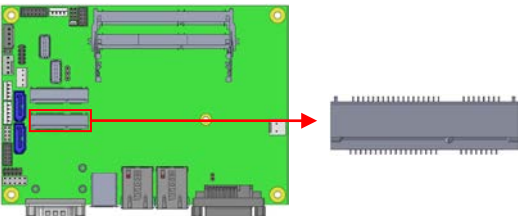

*\*\* The gap of height between J15 & J16 is following PCI Express Mini Card electromechanical spec. \*\**


**J17: COM2/RS232 Serial Port**

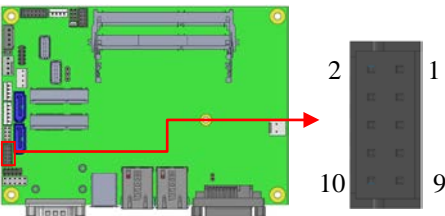

Signal Name	Pin #	Pin #	Signal Name
DCD, Data carrier detect	1	2	RXD, Receive data
TXD, Transmit data	3	4	Data terminal ready
GND, ground	5	6	DSR, Data set ready
RTS, Request to send	7	8	CTS, Clear to send
RI, Ring indicator	9	10	Not Used




**J19: Digital I/O Connector**

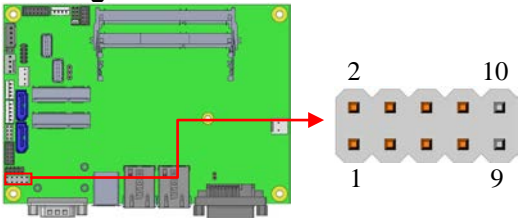

Signal Name	Pin #	Pin #	Signal Name
Ground	1	2	Ground
OUT3	3	4	OUT1
OUT2	5	6	OUT0
IN3	7	8	IN1
IN2	9	10	IN0

**CPU\_FAN1: CPU Fan Power Connector**

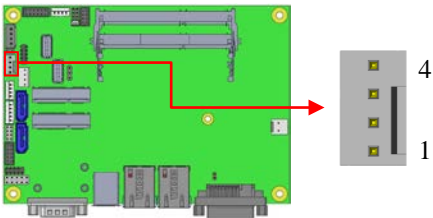

Pin #	Signal Name
1	Ground
2	+12V
3	Rotation detection
4	Control

This page is intentionally left blank.

## BIOS Setup

This chapter describes the different settings available in the BIOS that comes with the board. The topics covered in this chapter are as follows:

BIOS Introduction .....	24
BIOS Setup .....	24
Advanced Settings .....	26
Chipset Settings .....	37
Boot Settings .....	41
Security Settings .....	40
Save & Exit Settings .....	42

## BIOS Introduction

The BIOS (Basic Input/Output System) installed in your computer system's ROM provides critical low-level support for a standard device such as disk drives, serial ports and parallel ports. It also adds virus and password protection as well as special support for detailed fine-tuning of the chipset controlling the entire system.

## BIOS Setup

The BIOS provides a Setup utility program for specifying the system configurations and settings. The BIOS ROM of the system stores the Setup utility. When you turn on the computer, the BIOS is immediately activated. Pressing the <Del> key immediately allows you to enter the Setup utility. If you are a little bit late pressing the <Del> key, POST (Power On Self Test) will continue with its test routines, thus preventing you from invoking the Setup. If you still wish to enter Setup, restart the system by pressing the "Reset" button or simultaneously pressing the <Ctrl>, <Alt> and <Delete> keys. You can also restart by turning the system Off and back On again. The following message will appear on the screen:

Press <DEL> or <ESC> to Enter Setup

In general, you press the arrow keys to highlight items, <Enter> to select, the <PgUp> and <PgDn> keys to change entries, <F1> for help and <Esc> to quit.

When you enter the Setup utility, the Main Menu screen will appear on the screen. The Main Menu allows you to select from various setup functions and exit choices.

## Main Settings

Aptio Setup Utility – Copyright © 2011 American Megatrends, Inc.

Main	Advanced	Chipset	Boot	Security	Save & Exit
Total memory			4096 MB (DDR3)		Choose the system default language
Memory Frequency			1600 Mhz		
					→ ← Select Screen
					↑ ↓ Select Item
System Date			[Tue 10/29/2013]		Enter: Select
System Time			[15:27:20]		+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit
Access Level			Administrator		

## System Date

Set the Date. Use Tab to switch between Data elements.

## System Time

Set the Time. Use Tab to switch between Data elements.

Advanced Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
<ul style="list-style-type: none"><li>▶ CPU Configuration</li><li>▶ ACPI Settings</li><li>▶ LVDS (eDP/DP) Configuration</li><li>▶ ISmart Controller</li><li>▶ AMT Configuration</li><li>▶ NCT6102D Super IO Configuration</li><li>▶ NCT6102D H/W Monitor</li><li>▶ SATA Configuration</li><li>▶ CSM Configuration</li><li>▶ USB Configuration</li></ul>				<div>→ ← Select Screen</div> <div>↑ ↓ Select Item</div> <div>Enter: Select</div> <div>+ - Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save</div> <div>ESC: Exit</div>	

## CPU Configuration

This section shows the CPU configuration parameters.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
CPU Configuration					
Intel(R) CPU Core(TM)i7-5650U @ 2.20GHz					
CPU Signature		306d4			
Microcode Patch		e			
Max CPU Speed		2200 MHz			
Min CPU Speed		500 MHz			
CPU Speed		3100 MHz			
Processor Cores		2			
Intel HT Technology		Supported			
Intel VT-x Technology		Supported			
Intel SMX Technology		Supported			
64-bit		Supported			
EIST Technology		Supported			
L1 Data Cache		32 kB x 2			
L1 Code Cache		32 kB x 2			
L2 Cache		256 kB x 2			
L3Cache		4 MB			
L4Cache		Not Present			
Hyper-threading		Enabled			
Active Processor Cores		All			
Overclocking lock		Disabled			
Execute Disable Bit		Enabled			
Intel Virtualization Technology		Enabled			
EIST		Enabled			
Turbo Mode		Enabled			
					→ ← Select Screen
					↑ ↓ Select Item
					Enter: Select
					+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

## Hyper-threading

Select the performance state that the BIOS will set before OS handoff.

## Active Processor Cores

Number of cores to enable in each processor package.

## Overclocking lock

Flex\_RATIO(194)MSR

## Execute Disable Bit

XD can prevent certain classes of malicious buffer overflow attacks when combined with a supporting OS (Windows Server 2003 SP1, Windows XP SP2, SuSE Linux 9.2, RedHat Enterprise 3 Update 3.)

## Intel Virtualization Technology

When enabled, a VMM can utilize the additional hardware capabilities provided by Vanderpool Technology.

## EIST

Enabled/Disabled Intel Speedstep.

## ACPI Settings

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
ACPI Settings				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit	
Enable ACPI Auto Configuration		Disabled			
Enable Hibernation		Enabled			
ACPI Sleep State		S3 (Suspend to R...)			
Lock Legacy Resources		Disabled			

## Enable Hibernation

Enables or Disables System ability to hibernate (OS/S4 Sleep State). This option may be not effective with some OS.

## ACPI Sleep State

Select ACPI sleep state the system will enter, when the SUSPEND button is pressed.

## Lock Legacy Resources

Enabled or Disabled Lock of Legacy Resources.



## LVDS (eDP/DP) Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
LVDS (eDP/DP) Configuration					→ ← Select Screen
LVDS (eDP/DP) Support			Enabled	↑ ↓ Select Item	
Panel Color Depth			24 BIT	Enter: Select	
LVDS Chanel Type			Single	+- Change Field	
Panel Type			800 x 600	F1: General Help	
LVDS Backlight Control (3.3V / 5V)			3.3V	F2: Previous Values	
LVDS Backlight Level Control			Level-5	F3: Optimized Default	
					F4: Save & Exit
					ESC: Exit

### Panel Color Depth

Select the LFP Panel Color Depth: 18 Bit, 24 Bit.

### LVDS Chanel Type

Select LVDS Chanel Type

### Panel Type

Select LCD panel used by Internal Graphics Device by selecting the appropriate setup item: 800x600 LVDS ~ 1920x1080 LVDS.

### LVDS Backlight Control (3.3V / 5V)

LVDS Back Light Volt Control: 3.3V, 5V

### LVDS Backlight Level Control

Backlight Brightness Control

ISmart Controller

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
ISmart Controller				→ ← Select Screen	
Power-On after Power failure				↑ ↓ Select Item	
Schedule Slot 1				Enter: Select	
Schedule Slot 2				+- Change Field	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Default	
				F4: Save	
				ESC: Exit	

Power-On after Power failure

Enable or Disable.

Schedule Slot 1 / 2

Setup the hour/minute for system power on.

## AMT Configuration

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Intel AMT			Enabled		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit
BIOS Hotkey Pressed			Disabled		
MEBx Selection Screen			Disabled		
Hide Un-Configure ME Confirmation			Disabled		
Amt Wait Timer			0		
Activate Remote Assistance Process			Disabled		
USB Configure			Enabled		
PET Progress			Enabled		
AMT CIRA Timeout			0		
Watchdog			Disabled		
OS Timer			0		
BIOS Timer			0		

## AMT Configuration

This configuration is supported iAMT function. Options are Enabled and Disabled.

Note: iAMT H/W is always enabled. This option just controls the BIOS extension execution. If enabled, this requires additional firmware in the SPI device.

### Amt Wait Timer

Set timer to wait before sending ASF\_GET\_BOOT\_OPTIONS.

### Activate Remote Assistance Process

Trigger CIRA boot.

### PET Progress

User can Enable/Disable PET Events progress to receive PET events or not.

### Watchdog Timer

Enable/Disable Watchdog Timer.

NCT6102D Super IO Configuration

Aptio Setup Utility

Main	Advanced	Chipset	Boot	Security	Save & Exit
NCT6102D Super IO Configuration				→ ←Select Screen	
NCT6102D Super IO Chip				↑ ↓ Select Item	
▶ Serial Port 0 Configuration				Enter: Select	
▶ Serial Port 1 Configuration				+- Change Field	
				F1: General Help	
				F2: Previous Values	
				F3: Optimized Default	
				F4: Save	
				ESC: Exit	

Serial Port Configuration

Set parameters of serial ports. User can Enable/Disable the serial port and Select an optimal settings for the Super IO Device.

**NCT6102D H/W Monitor****Aptio Setup Utility**

Main	Advanced	Chipset	Boot	Security	Save & Exit
PC Health Status					
ACPI Shutdown Temperature			Disable		
#####Smart Fan Function#####					
CPU Smart Fan Control			Disabled		→ ←Select Screen
SYS Temp			+32.5 C		↑ ↓ Select Item
CPU Temp			+35.5 C		Enter: Select
Fan Speed			2673		+ - Change Field
Vcore			+1.792 V		F1: General Help
+5V			+5.255 V		F2: Previous Values
+12V			+12.096 V		F3: Optimized Default
Memory Voltage			+1.360 V		F4: Save
					ESC: Exit

**ACPI Shutdown Temperature**

The default setting is Disabled.

**Smart Fan Function**

This field enables or disables the smart fan feature. At a certain temperature, the fan starts turning. Once the temperature drops to a certain level, it stops turning again.

**Temperatures/Voltages**

These fields are the parameters of the hardware monitoring function feature of the board. The values are read-only values as monitored by the system and show the PC health status.

## SATA Configuration

SATA Devices Configuration.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
SATA Controller(s)		Enabled		<div>→ ← Select Screen</div> <div>↑ ↓ Select Item</div> <div>Enter: Select</div> <div>+ - Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save</div> <div>ESC: Exit</div>	
SATA Mode Selection		AHCI			
SATA Controller Speed		Default			
SATA Port0		Empty			
Software Preserve		Unknown			
Hot Plug		Disabled			
SATA Port1		Empty			
Software Preserve		Unknown			
Hot Plug		Disabled			
SATA Port2		Empty			
Software Preserve		Unknown			
Hot Plug		Disabled			
SATA Port3		Empty			
Software Preserve		Unknown			
Hot Plug		Disabled			

### SATA Controller(s)

Enable / Disable Serial ATA Controller.

### SATA Mode Selection

- (1) AHCI Mode.
- (2) RAID Mode.

### SATA Controller Speed

Indicates the maximum speed the SATA controller can support

### Hot Plug

Designates this port as Hot Pluggable.

## CSM Configuration

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Compatibility Support Module Configuration					
CSM Support			Enabled		
CSM16 Module Version			07.76		
GateA20 Active			Upon		
Option ROM Messages			Force BIOS		
Boot option filter			UEFI and Legacy		
Option ROM execution					
Network			Do not launch		
Storage			Legacy only		
Video			Legacy only		
Other PCI device			UEFI		
				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit	

### CSM Support

Enable/Disable CSM Support.

### Boot option filter

This option controls what devices system can boot to.

### Network

Controls the execution of UEFI and Legacy PXE OpROM.

### Storage

Controls the execution of UEFI and Legacy Storage OpROM.

### Video

Controls the execution of UEFI and Legacy Video OpROM.

### Other PCI device

Determines OpROM execution policy for devices other than Network, Storage, or Video.

USB Configuration

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration				→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit	
USB Module Version		8.11.02			
USB Devices:		1 Keyboard, 1 Mouse			
Legacy USB Support		Enabled			
USB3.0 Support		Enabled			
XHCI Hand-off		Enabled			
EHCI Hand-off		Enabled			
USB hardware delays and time-outs:					
USB Transfer time-out		20 sec			
Device reset time-out		20 sec			
Device power-up delay		Auto			

Legacy USB Support

Enables Legacy USB support.  
AUTO option disables legacy support if no USB devices are connected.  
DISABLE option keeps USB devices available only for EFI applications.

USB3.0 Support

Enable/Disable USB3.0 (XHCI) Controller support.

XHCI Hand-off

This is a workaround for OSeS without XHCI hand-off support. The XHCI ownership change should be claimed by XHCI driver.

EHCI Hand-off

Enabled/Disabled. This is a workaround for OSeS without EHCI hand-off support. The EHCI ownership change should be claimed by EHCI driver.

USB Transfer time-out

The time-out value for Control, Bulk, and Interrupt transfers.

Device reset time-out

USB mass Storage device start Unit command time-out.

Device power-up delay

Maximum time the device will take before it properly reports itself to the Host Controller. ‘Auto’ uses default value: for a Root port it is 100ms, for a Hub port the delay is taken from Hub descriptor.



## Chipset Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
<ul style="list-style-type: none"> <li>▶ System Agent (SA) Configuration</li> <li>▶ PCH-IO Configuration</li> </ul>					

## System Agent (SA) Configuration

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
System Agent Bridge Name			Broadwell		→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save    ESC: Exit
System Agent RC Version			2.2.2.0		
VT-d Capability			Supported		
VT-d			Enabled		

### VT-d

Check to enable VT-d function on MCH.

PCH-IO Configuration

This section allows you to configure the North Bridge Chipset.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Intel PCH RC Version			2.2.2.0		<div>→ ←    Select Screen</div> <div>↑ ↓   Select Item</div> <div>Enter: Select</div> <div>+ -   Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save</div> <div>ESC: Exit</div>
Intel PCH SKU Name			Premium SKU(BDW-U)		
Intel PCH Rev ID			03/B2		
▶ PCI Express Configuration					
▶ USB Configuration					
▶ PCH Azalia Configuration					
PCH LAN Controller			Enabled		
Wake on LAN			Disabled		

PCH LAN Controller

Enable or disable onboard NIC.

Wake on LAN

Enable or disable integrated LAN to wake the system. (The Wake On LAN cannot be disabled if ME is on at Sx state.)

PCI Express Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCI Express Configuration			<div>→ ←    Select Screen</div> <div>↑ ↓   Select Item</div> <div>Enter: Select</div> <div>+ -   Change Field</div> <div>F1: General Help</div> <div>F2: Previous Values</div> <div>F3: Optimized Default</div> <div>F4: Save</div> <div>ESC: Exit</div>		
▶ PCI Express Root Port 1					
▶ PCI Express Root Port 2					
▶ PCI Express Root Port 3					
▶ PCI Express Root Port 4					
▶ PCI-E Port 5 is assigned to LAN					
▶ PCI Express Root Port 6					

PCI Express Configuration

PCI Express Root Port Settings.

## USB Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
USB Configuration					→ ← Select Screen
USB Precondition			Disabled		↑ ↓ Select Item
xHCI Mode			Auto		Enter: Select
					+ - Change Field
USB Ports Per-Port Disable Control			Disabled		F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

### USB Precondition

Precondition work on USB host controller and root ports for faster enumeration.

### xHCI Mode

Mode of operation of xHCI controller.

### USB Ports Per-Port Disable Control

Control each of the USB ports (0~13) disabling.

## PCH Azalia Configuration

Main	Advanced	Chipset	Boot	Security	Save & Exit
PCH Azalia Configuration					→ ← Select Screen
Azalia			Enabled		↑ ↓ Select Item
					Enter: Select
					+ - Change Field
					F1: General Help
					F2: Previous Values
					F3: Optimized Default
					F4: Save
					ESC: Exit

### Azalia

Control Detection of the Azalia device.

Disabled = Azalia will be unconditionally be disabled.

Enabled = Azalia will be unconditionally be enabled.

Auto = Azalia will be enabled if present, disabled otherwise.

Security Settings

This section allows you to configure and improve your system and allows you to set up some system features according to your preference.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Password Description					
If ONLY the Administrator's password is set, then this only limit access to Setup and is only asked for when entering Setup.					
If ONLY the User's password is set, then this is a power on password and must be entered to boot or enter Setup. In Setup the User will have Administrator rights					
The password length must be				→ ← Select Screen	
in the following range:				↑ ↓ Select Item	
Minimum length			3	Enter: Select	
Maximum length			20	+- Change Field	
Administrator Password				F1: General Help	
User Password				F2: Previous Values	
				F3: Optimized Default	
				F4: Save	
				ESC: Exit	

Administrator Password

Set Setup Administrator Password.

User Password

Set User Password.

## Boot Settings

This section allows you to configure the boot settings.

Aptio Setup Utility					
Main	Advanced	Chipset	Boot	Security	Save & Exit
Boot Configuration					
Setup Prompt Timeout			1		
Bootup NumLock State			On		
Quiet Boot			Disabled		
Fast Boot			Disabled		
<b>Boot mode select</b>			LEGACY		
FIXED BOOT ORDER Priorities					→ ← Select Screen
Boot Option #1			Hard Disk		↑ ↓ Select Item
Boot Option #2			CD / DVD		Enter: Select
Boot Option #3			USB Hard Disk		+ - Change Field
Boot Option #4			USB CD / DVD		F1: General Help
Boot Option #5			USB Key		F2: Previous Values
Boot Option #6			USB Floppy		F3: Optimized Default
Boot Option #7			USB LAN		F4: Save
Boot Option #8			Network		ESC: Exit

### Setup Prompt Timeout

Number of seconds to wait for setup activation key.

65535(0xFFFF) means indefinite waiting.

### Bootup NumLock State

Select the keyboard NumLock state.

### Quiet Boot

Enables/Disables Quiet Boot option.

### Fast Boot

Enables/Disables boot with initialization of a minimal set of devices required to launch active boot option. Has no effect for BBS boot options.

### Boot mode select

Select boot mode LEGACY/UEFI

### FIXED BOOT ORDER Priorities

Sets the system boot order.

## Save & Exit Settings

Main	Advanced	Chipset	Boot	Security	Save & Exit
Save Changes and Exit Discard Changes and Exit Save Changes and Reset Discard Changes and Reset  Save Options Save Changes Discard Changes  Restore Defaults Save as User Defaults Restore User Defaults					→ ← Select Screen ↑ ↓ Select Item Enter: Select +- Change Field F1: General Help F2: Previous Values F3: Optimized Default F4: Save ESC: Exit

### Save Changes and Exit

Exit system setup after saving the changes.

### Discard Changes and Exit

Exit system setup without saving any changes.

### Save Changes and Reset

Reset the system after saving the changes.

### Discard Changes and Reset

Reset system setup without saving any changes.

### Save Changes

Save Changes done so far to any of the setup options.

### Discard Changes

Discard Changes done so far to any of the setup options.

### Restore Defaults

Restore/Load Defaults values for all the setup options.

### Save as User Defaults

Save the changes done so far as User Defaults.

### Restore User Defaults

Restore the User Defaults to all the setup options.

## Drivers Installation

This section describes the installation procedures for software and drivers. The software and drivers are included with the board. If you find the items missing, please contact the vendor where you made the purchase. The contents of this section include the following:

Intel Chipset Software Installation Utility .....	44
VGA Drivers Installation .....	47
Realtek HD Audio Driver Installation .....	49
LAN Drivers Installation .....	51
Intel® Management Engine Interface .....	55

### **IMPORTANT NOTE:**

After installing your Windows operating system, you must install first the Intel Chipset Software Installation Utility before proceeding with the drivers installation.

## Intel Chipset Software Installation Utility

---

The Intel Chipset Drivers should be installed first before the software drivers to enable Plug & Play INF support for Intel chipset components. Follow the instructions below to complete the installation.

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Broadwell ULT Chipset Drivers**.



2. Click **Intel(R) Chipset Software Installation Utility**.







3. When the Welcome screen to the Intel® Chipset Device Software appears, click *Next* to continue.



4. Click *Yes* to accept the software license agreement and proceed with the installation process.

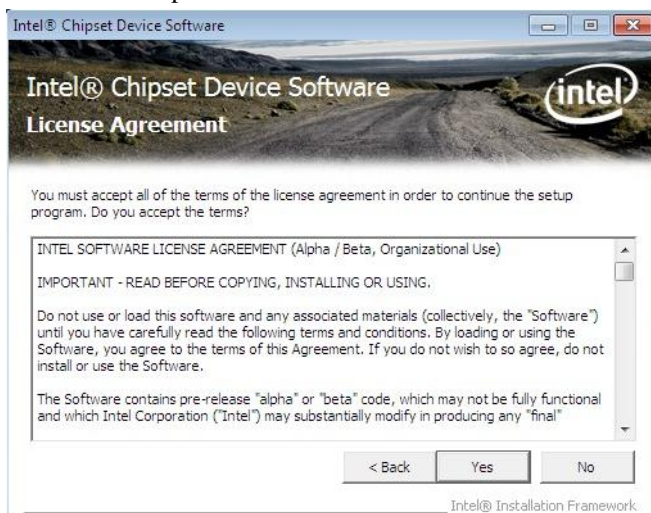

5. On the Readme File Information screen, click **Next** to continue the installation.

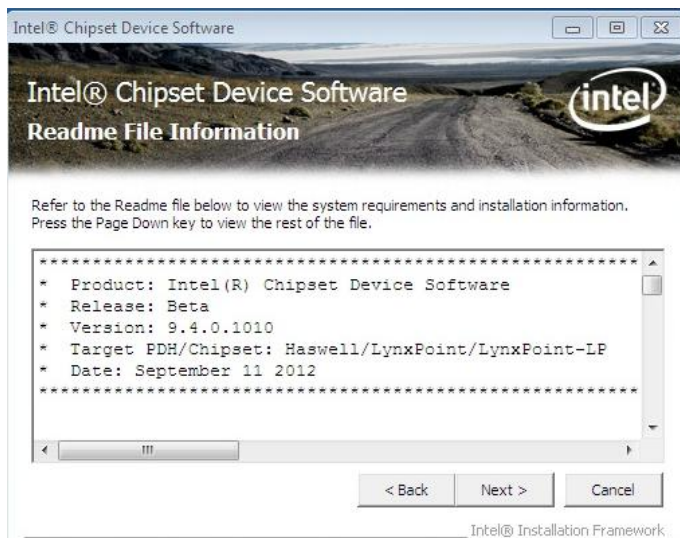

6. The Setup process is now complete. Click **Finish** to restart the computer and for changes to take effect.



## VGA Drivers Installation

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Broadwell ULT Chipset Drivers**.


2. Click **Intel(R) HD Graphics Driver**.




3. When the Welcome screen appears, click **Next** to continue.



4. Click **Yes** to agree with the license agreement and continue the installation.

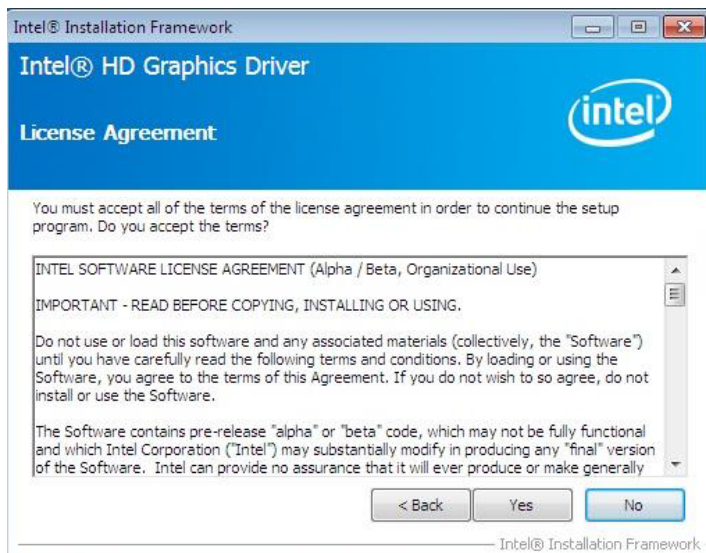

5. Setup complete. Click **Finish** to restart the computer and for changes to take effect.

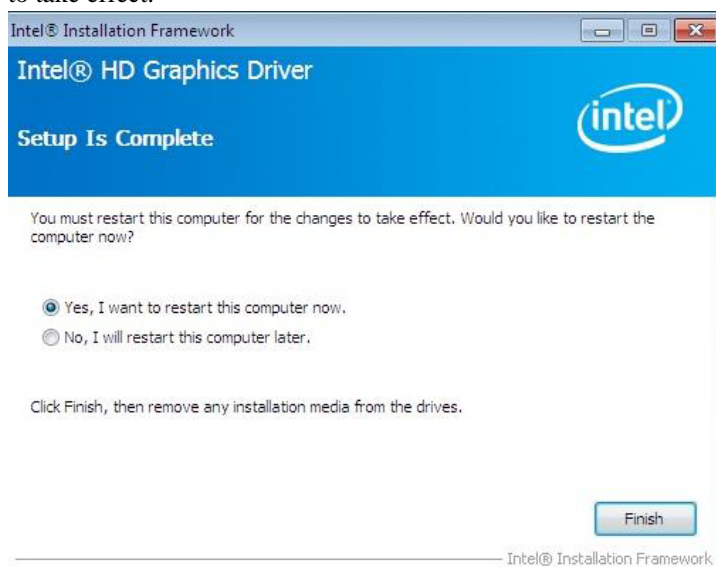


## Realtek HD Audio Driver Installation

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Broadwell ULT Chipset Drivers**.


2. Click **Realtek High Definition Audio Driver**.



3. On the Welcome to the InstallShield Wizard screen, click **Yes** to proceed with and complete the installation process.

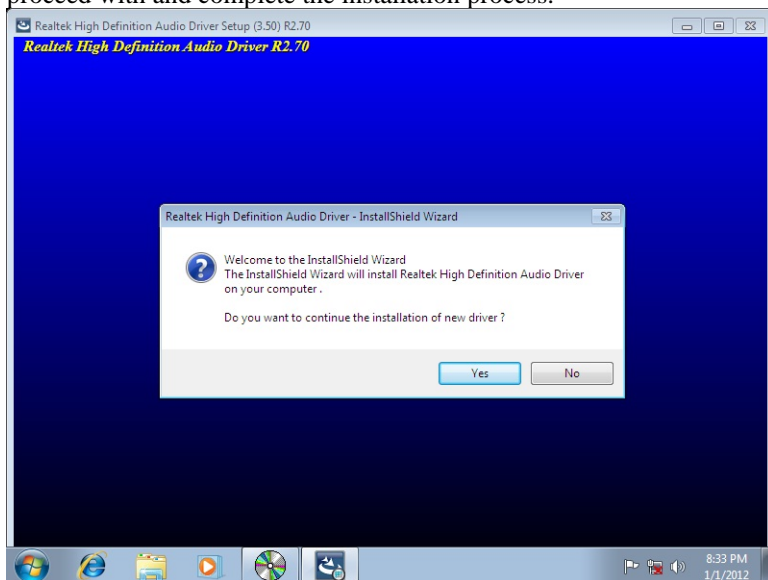

4. The InstallShield Wizard Complete. Click ***Finish*** to restart the computer and for changes to take effect.

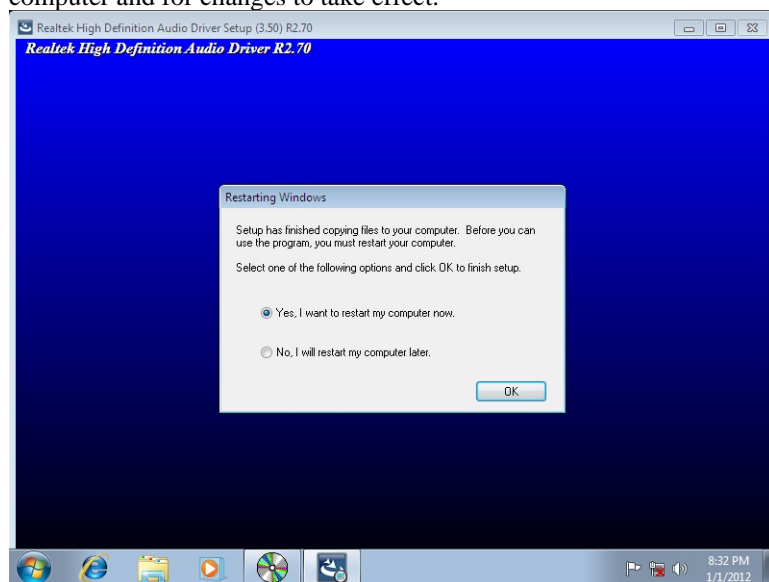


## LAN Drivers Installation

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Broadwell ULT Chipset Drivers**.

2. Click **Intel(R) PRO LAN Network Driver**.



3. Click **Install Drivers and Software**.

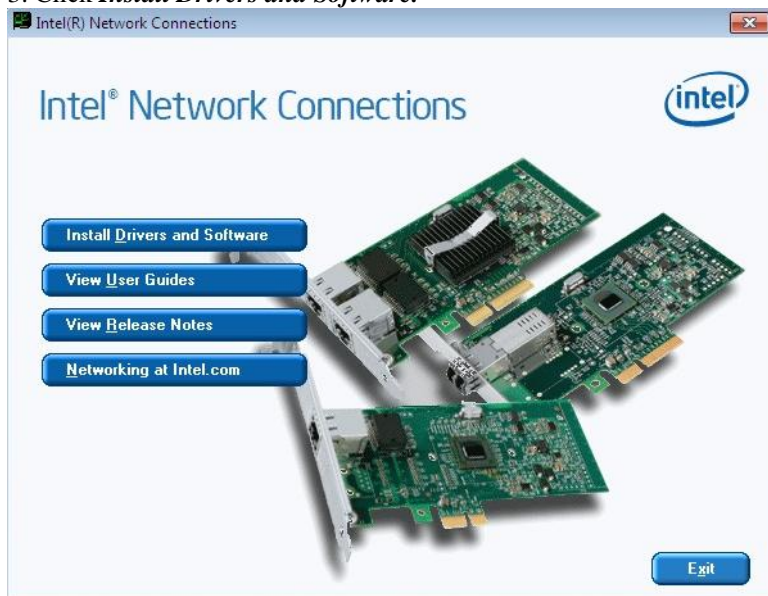



4. When the Welcome screen appears, click *Next*.




5. Click *Next* to agree with the license agreement.







6. Click the checkbox for **Drivers** in the Setup Options screen to select it and click **Next** to continue.

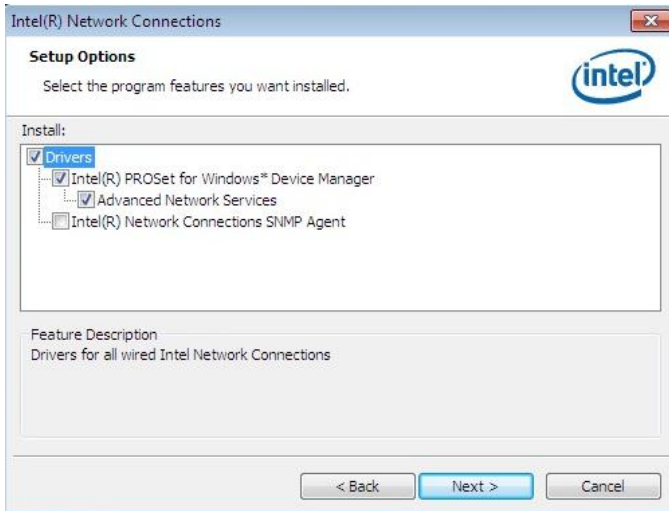

7. The wizard is ready to begin installation. Click **Install** to begin the installation.

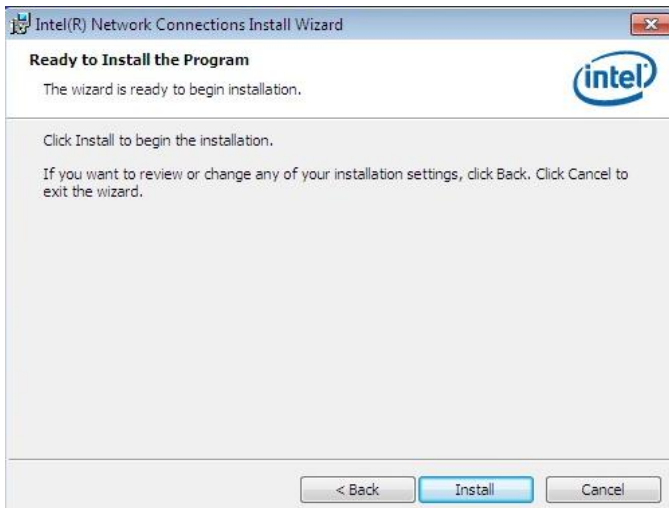

8. When InstallShield Wizard is complete, click **Finish**.

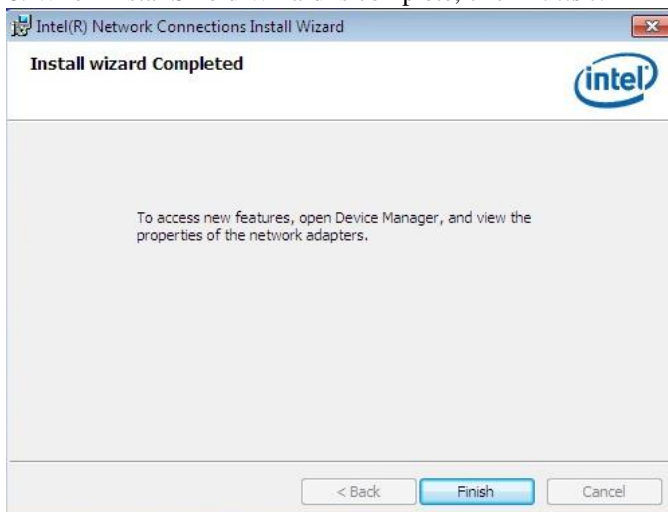


## Intel® Management Engine Interface

1. Insert the DVD that comes with the board. Click **Intel** and then **Intel(R) Broadwell ULT Chipset Drivers**.
2. Click **Intel(R) AMT 10.0 Drivers**.




3. When the Welcome screen to the InstallShield Wizard for Intel® Management Engine Components, click the checkbox for **Install Intel® Control Center** & click **Next**.

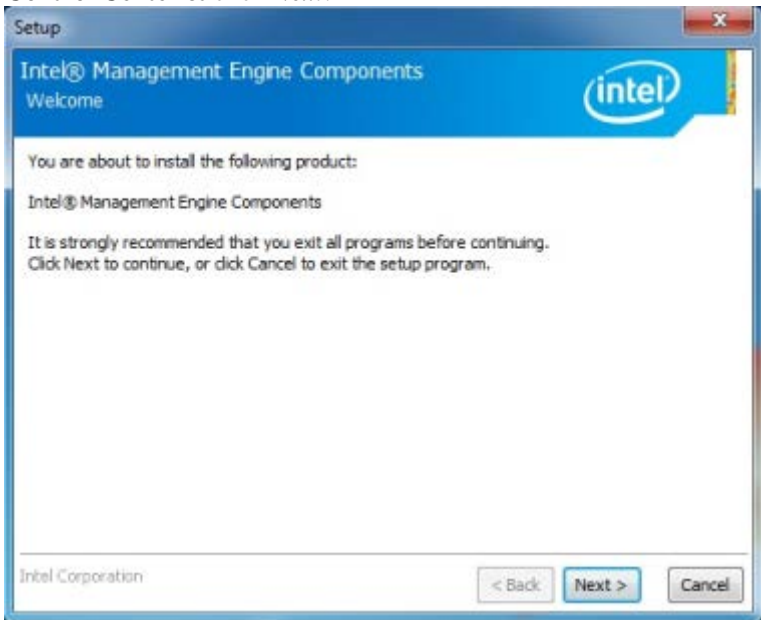

4. Click **Yes** to agree with the license agreement.



5. When the Setup Progress screen appears, click **Next**. Then, click **Finish** when the setup progress has been successfully installed.

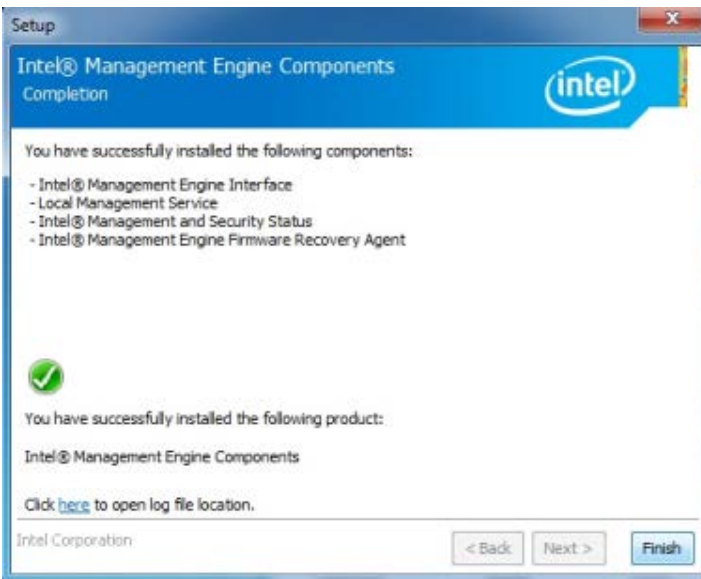

## Appendix

### A. I/O Port Address Map

Each peripheral device in the system is assigned a set of I/O port addresses which also becomes the identity of the device. The following table lists the I/O port addresses used.

Address	Device Description
000h - 01Fh	DMA Controller #1
020h - 021h	Interrupt Controller #1
040h - 043h	System Timer
070h - 077h	System/CMOS Real Time Clock
081h - 091h	DMA Controller #2
0A0h - 0A1h	Interrupt Controller #2
081h - 091h	DMA Controller #3
2F8h - 2FFh	Serial Port #2(COM2)
3C0h - 3DFh	Graphics adapter Controller
3F8h - 3FFh	Serial Port #1(COM1)
D000 - FFFh	PCI Root Ports

## B. Interrupt Request Lines (IRQ)

Peripheral devices use interrupt request lines to notify CPU for the service required. The following table shows the IRQ used by the devices on board.

Level	Function
IRQ0	System Timer Output
IRQ1	Keyboard
IRQ3	Serial Port #2
IRQ4	Serial Port #1
IRQ5	SMBus Controller
IRQ8	Real Time Clock
IRQ19	SATA AHCI Controller

## C. Watchdog Timer Configuration

The WDT is used to generate a variety of output signals after a user programmable count. The WDT is suitable for use in the prevention of system lock-up, such as when software becomes trapped in a deadlock. Under these sorts of circumstances, the timer will count to zero and the selected outputs will be driven. Under normal circumstance, the user will restart the WDT at regular intervals before the timer counts to zero.

### SAMPLE CODE:

```
//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include <dos.h>
#include <conio.h>
#include <stdio.h>
#include <stdlib.h>
#include "6106"
//-----
int main (int argc, char *argv[]);
void EnableWDT(int);
void DisableWDT(void);
//-----
int main (int argc, char *argv[])
{
    unsigned char bBuf;
    unsigned char bTime;
    char **endptr;

    char SIO;

    printf("6106 watch dog program\n");

    bTime = strtol (argv[1], endptr, 10);
    printf("System will reset after %d seconds\n", bTime);

    if (bTime)
    {
        else
        {
            if (bTime > 0 && bTime < 256)
            {

                A=2;

                unsigned char result;
                Set_6106_LD(0x08);

                gotoxy(1,12);

            }
        }
    }
}
```

```

    }
    //-----
    void EnableWDT(int interval)
    {
        unsigned char bBuf;

        Set_6106_LD(0x08);
        Set_6106_Reg(0x30, 0x01);

        Set_6106_Reg(0xF1, interval);

    }
    //-----
    void DisableWDT(void)
    {
        unsigned char bBuf;

        Set_6106_LD(0x08);
        Set_6106_Reg(0x30, 0x00);

    }
    //-----

//-----
//
// THIS CODE AND INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY
// KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE
// IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR
// PURPOSE.
//
//-----
#include "6106.H"
#include <dos.h>
//-----
unsigned int 6106_BASE;
void Unlock_6106 (void);
void Lock_6106 (void);
//-----
unsigned int Init_6106(void)
{
    unsigned int result;
    unsigned char ucDid;

    6106_BASE = 0x4E;
    result = 6106_BASE;

    ucDid = Get_6106_Reg(0x20);
    if (ucDid == 0x07) //6106
    {
        goto Init_Finish;
    }

    6106_BASE = 0x2E;
    result = 6106_BASE;

    ucDid = Get_6106_Reg(0x20);
    if (ucDid == 0x07) //6106
    {
        goto Init_Finish;
    }

    6106_BASE = 0x00;
    result = 6106_BASE;

Init_Finish:
    return (result);
}

```



```

}
//-----
void Unlock_6106(void)
{
    outportb(6106_INDEX_PORT, 6106_UNLOCK);
    outportb(6106_INDEX_PORT, 6106_UNLOCK);
}
//-----
void Lock_6106(void)
{
    outportb(6106_INDEX_PORT, 6106_LOCK);
}
//-----
void Set_6106_LD( unsigned char LD)
{
    Unlock_6106();
    outportb(6106_INDEX_PORT, 6106_REG_LD);
    outportb(6106_DATA_PORT, LD);
    Lock_6106();
}
//-----
void Set_6106_Reg( unsigned char REG, unsigned char DATA)
{
    Unlock_6106();
    outportb(6106_INDEX_PORT, REG);
    outportb(6106_DATA_PORT, DATA);
    Lock_6106();
}
//-----
unsigned char Get_6106_Reg(unsigned char REG)
{
    unsigned char Result;
    Unlock_6106();
    outportb(6106_INDEX_PORT, REG);
    Result = inportb(6106_DATA_PORT);
    Lock_6106();
    return Result;
}
//-----

```